AUDIO EN REMOTE CONTROL VIA INTERNET ,,,,,OF ,,,,,S:

HET GROTE STAPPENPLAN

- 1- dowload and install Teamviewer
- 2- download and install Remaud

3- make sure you have rig control software such as HRD de luxe

4- zorg ervoor dat je transceiver een interface heeft om PTT te schakelen en audio door te geven van en naar de (server) computer naar je rig! Dit zal verschillend zijn voor elk type/merk toestel. En ook HRD wil een link naar je toestel!

TEAMVIEWER

- Set up an acount
- in Teamviewer 'EXTRA' 'OPTIONS' : install VPN driver!
- make a group from all your computers you wish to use

REMAUD

- set up Remaud server on the computer you wish to use to control your Transceiver (server)
- set up Remaud Client on the computer from which you want to work remotely. (client)

HOW TO CONNECT AND MAKE IT HAPPEN

- Start Teamviewer from your remote (client) and connect to (server) using:
 - 1- remote control
 - 2- VPN
- Ook op je (server) computer dient Teamviewer actief te zijn je kan het opstarten van Teamviewer linken aan het opstarten van windows – op die manier loopt Teamviewer steeds mee in de achtergrond (icon in systemtray zichtbaar)
- -
- Start Remaud server on the (server) computer
- Start Remaud client on the (client) computer

Als uw instellingen correct waren wordt de connectie gemaakt.

MAAR HOE REMAUD INSTELLEN?

van zodra Teamviewer VPN is geactiveerd verschijnen de IP Adressen van zowel de (server) als van de (client) computer

Met deze info kan je REMAUD correct instellen.

our partner with all pro	grams instead of just TeamViewer.	
r more information on	VPN visit http://www.teamviewer.co	m
tive VPN connection:	ON4EZ-WIN7 (922 104 298 🔻	Close connection
Status		
VPN is running		
Your IP:		7.174.8.58
IP of Partner:		7.165.115.198
Traffic:		398 kB / 143 kB
Actions There are two poss your partner via th The test ping is for	sibilities of using VPN. One possible us e windows explorer like any other PC testing the speed and stability of the	se is that you can access : in your LAN. e connection
		Test ping



Nu nog je audio devices instellen op beide computers, PTT instellen op de (server) computer niet vergeten!

And you're in business!!!

Settings		۲
Server Remote Users Audio Devices Audio Codecs Audio Buffers PTT	Audio Devices	
	Choose Wave In Device (connected to your radio audio output)	
	Line 1/2 (M-Audio Delta Audioph (0)	
	Choose Wave Out Device (connected to your radio audio input)	
	Speakers (ASUS Xonar Essence ST (0)	
	<u>Q</u> K <u>C</u> ancel	
Settings		۲
General Remote Connections <mark>Audio Devices</mark> Audio Codecs Audio Buffers	Audio Devices	
	Choose <u>W</u> ave Out Device (Loudspeakers, Headset)	
	Speakers (ASUS Xonar Essence ST (0)	
	Choose Wave In Device (Microphone, Headset)	
	Line In (ASUS Xonar Essence STX (8)	
	<u>O</u> K <u>C</u> ancel	

NOW:

start up HRD de luxe (of een ander rig control software pakket) – ondertussen had je wel al door dat je transceiver moet zijn verbonden met je (server) computer – zonder dat lukt het uiteraard nooit!



En QSO's maken is nu de boodschap!!

Support beschikbaar van ON4EZ@ telenet,be

HAPPY HUNTING!